

# Wiring Diagram


## Step Wiring

12 AWG green ground wire must be securely attached to the chassis for step to operate

**Fuse block**  
**IMPORTANT:**  
The yellow wire must go to a terminal marked IGN (ignition) or to another terminal that is hot when the ignition is turned on.


16 AWG purple optional step light switch may be connected to porch light switch

5-6 amp maximum fuse or circuit breaker required

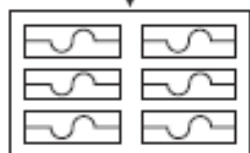


## Vehicle Wiring

20-25 amp fuse or circuit breaker required

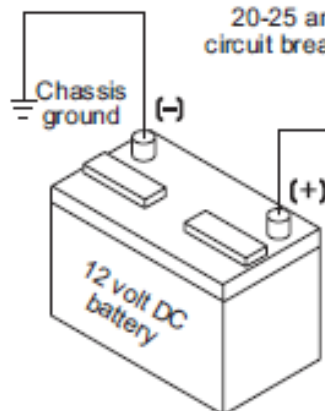


**Battery disconnect box/switch**  
**IMPORTANT:**  
If the switch is 'OFF' the step will not operate.

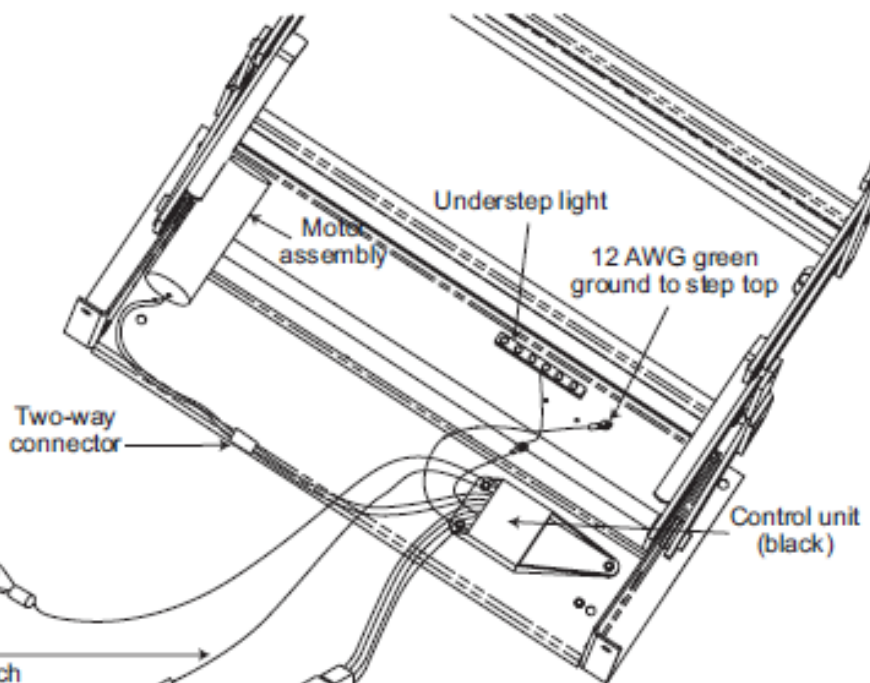

Four-way connector

16 AWG brown  
16 AWG yellow  
12 AWG red  
16 AWG white

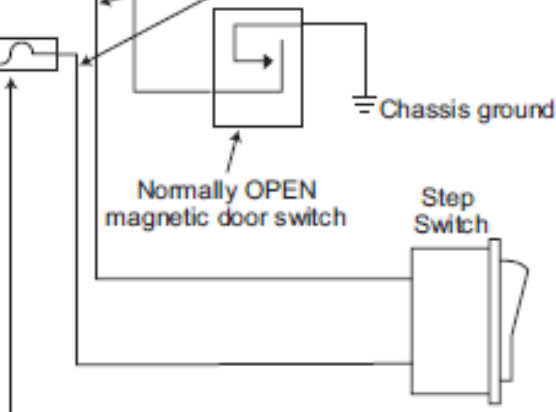

5-6 amp maximum fuse or circuit breaker (not supplied)